BBE® Sound Inc.

DI-400 User Manual

IMPORTANT SAFEGUARDS

For your protection, please read these safety instructions completely before operating the appliance, and keep this manual for future reference.

Carefully observe all warnings, precautions and instructions on the appliance and described in the operating instructions supplied with the appliance.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

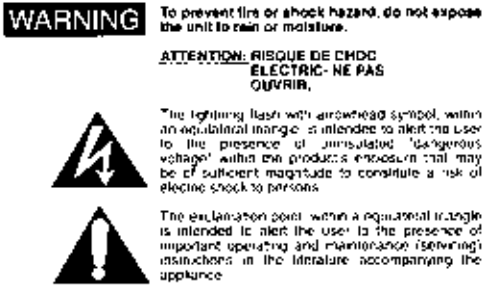
WARNING
To prevent fire or shock hazard, do not expose the unit to rain or moisture.
ATTENTION: RISQUE DE CHOC ELECTRIC- NE PAS OUVRIR.
The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
The exclamation point within a equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

INSTALLATION

Water and Moisture - Do not install the appliance near water: for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

Heat - Do not install the appliance near sources of heat such as radiators, heat registers, stoves, or other appliances that produce heat.

Ventilation - Situate the product so its location or position does not interfere with its proper ventilation. For example, you should not place the product on a bed, sofa, rug, or similar surface that might block the vent openings, or placed in a built-in installation, such as a bookcase or cabinet that might impede the flow of air through the ventilation openings.

Wall or Ceiling Mounting - If your appliance can be mounted to a wall or ceiling, mount it only as recommended.

Accessories - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

USE

Power Source - Connect the appliance to a power supply only of the type described in the operating instructions or as marked on the appliance.

Power-Cord Protection - Route the power cord so that it is not likely to be walked on or pinched by having objects placed on it, paying particular attention to the plugs, receptacles, and the point where the cord exits from the appliance.

Grounding or Polarization - Do not defeat the grounding or polarization feature of the AC power cord. If your AC receptacle will not accept the power cord plug, contact your electrician to install a proper AC receptacle.

When not in use - Unplug the power cord of the appliance from the outlet when left unused for a long period of time.To disconnect the cord, pull it out by grasping the plug. Never pull the plug out by the cord.

AC Receptacle - Check to make sure that the AC receptacle holds the power cord plug firmly and securely. If the power cord plug is loose, contact your electrician to replace the defective and unsafe AC

Foreign Objects - Be careful that foreign objects and liquids do not enter the enclosure through openings.

Cleaning - unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

SERVICE

Unplug the appliance from the wall outlet and consult qualified service personnel when:

- the power cord or the plug has been damaged.
- a solid object or liquid has fallen into the cabinet.
- the appliance has been exposed to rain or moisture.
- the appliance does not appear to operate normally or exhibits a marked change in performance.
- the appliance has been dropped, or the enclosure damaged.

Do not attempt to service the appliance beyond that described in the operating instructions. For all other servicing, refer to qualified service personnel only.

CONTENTS

Product Features 3
BBE Process Explained 4
Front Panel 5
Rear Panel 6
Instrument Application 7
Line Level Application 8
Service and Maintenance 9
Warranty 10
Specifications 11

Congratulations on your purchase of the BBE DI-400 Active Direct Box featuring the renowned Sonic Maximizer™ Processor!

With the introduction of the DI-400, we are now able to offer our Sonic Maximizer™ technology in an extremely high quality rack-mount DI.

This manual will be your guide to understanding the full functionality of the DI-400.

DI-400 FEATURES

- (4) Active DIs in a convenient 1U rack panel
- Full Function BBE Sonic Maximizer™
- 15dB Pad switch
- Phase reverse switch
- Ground lift switch
- Balanced transformerless XLR Output
- 1/4" Tip-Sleeve rear panel input
- 1/4" Tip-Sleeve front panel input and thru-put
- Mil-spec circuit boards
- Extra thick, extra wide circuit board traces for unequaled electron flow
- 1% metal film resistors throughout
- Made with pride in the USA

IMPORTANT

Before you begin, please check the contents within this box to insure that included are:

1.The BBE DI-400 with built-in Sonic Mazimizer™.
2.The BBE DI-400 User's Manual.
If any of these items are found to be damaged or missing, immediately contact the BBE dealer from whom the unit was purchased.

This manual will help you to effectively utilize the BBE DI-400. Reviewing the information contained in this manual will answer most of the common questions that our service department receives. If you still have questions, please feel free to call 800-233-8346.

THE BBE PROCESS—"WHAT IT IS"

Loudspeakers have difficulty working with the electronic signals supplied by an amplifier. These difficulties cause such major phase and amplitude distortion that the sound reproduced by speaker differs significantly from the sound produced by the original source.

In the past, these problems proved unsolvable and were thus delegated to a position of secondary importance in audio system design. However, phase and amplitude integrity is essential to accurate sound reproduction. Research shows that the information which the listener translates into the recognizable characteristics of a live performance are intimately tied into complex time and amplitude relationships between the fundamental and harmonic components of a given musical note or sound. These relationships define a sound's “sound”.

When these complex relationships pass through a speaker, the proper order is lost. The higher frequencies are delayed. A lower frequency may reach the listener's ear first or perhaps simultaneously with that of a higher frequency. In some cases, the fundamental components may be so time-shifted that they reach the listener's ear ahead of some or all of the harmonic components.

This change in the phase and amplitude relationship on the harmonic and fundamental frequencies is technically called “envelope distortion.” The listener perceives this loss of sound integrity in the reproduced sound as "muddy" and “smeared.” In the extreme, it can become difficult to tell the difference between musical instruments, for example, an oboe and a clarinet.

BBE Sound, Inc. conducted extensive studies of numerous speaker systems over a ten year period. With this knowledge, it became possible to identify the characteristics of an ideal speaker and to distill the corrections necessary to return the fundamental and harmonic frequency structures to their correct order. While there are differences among various speaker designs in the magnitude of their correction, the overall pattern of correction needed is remarkably consistent.

The BBE Process is so unique that 42 patents have been awarded by the U.S. Patent Office.

1/4" INPUT CONNECTOR
The 1/4" input connector of the DI-400 is unbalanced. The 1/4" input is designed for running instrument cables directly into the DI-400.

IN/OUT PUSH BUTTON
Engages the Sonic Maximizer Process. When the switch is pushed in, the BBE Process is on. When the switch is up, the BBE Process is off.

LOW CONTOUR CONTROL
Regulates the amount of phase corrected bass frequencies.

PROCESS CONTROL
Regulates the amount of phase correction.

1/4" THRU CONNECTOR
This 1/4" connector is wired in parallel to the Input connector and is used for continuing the connection to the instrument amplifier.

PAD PUSH BUTTON
Push in to activate "-15dB" pad.

PHASE PUSH BUTTON
Push in to reverse phase.

LED STATUS
"RED" = power on, BBE off/out, "GREEN" = power on, BBE on/in. LED not illuminated = power off.

POWER SWITCH
The Sonic Maximizer LEDs will illuminate when the power is on.

REAR PANEL

XLR OUTPUT CONNECTOR

The XLR output of the DI-400 is balanced. The XLR output is used for running from the DI-400 directly to the input of a mixing console.

XLR Pin configuration:
Pin 1 = Ground, Pin 2 = Positive and Pin 3 = Negative.

FUSE

Replace as needed with specified size and type.

1/4" UN-BALANCED INPUT CONNECTOR

The 1/4" input connector is wired in parallel with the front panel input and thru jacks.

GROUND LIFT PUSH BUTTON

When in the "lift" position (in) Pin 1 of the balanced XLR output (ground) is disconnected.

INSTRUMENT LEVEL APPLICATION

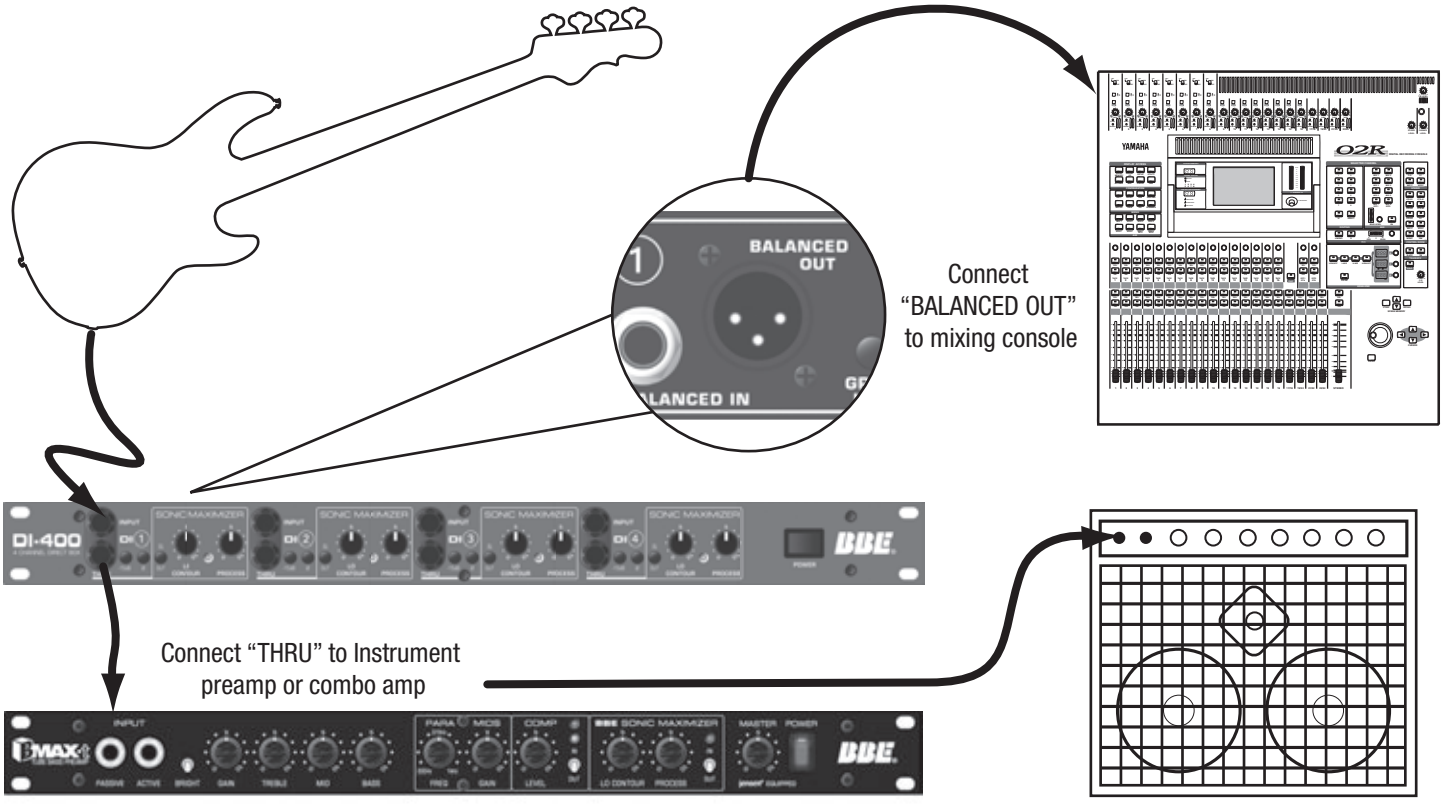

LINE LEVEL APPLICATION

Connect instrument to “input” on front panel or “unbalanced in” on back panel

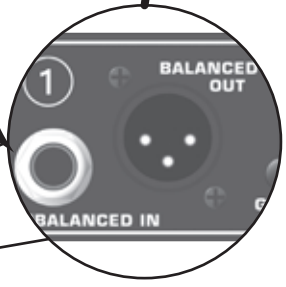

Connect “BALANCED OUT” to mixing console

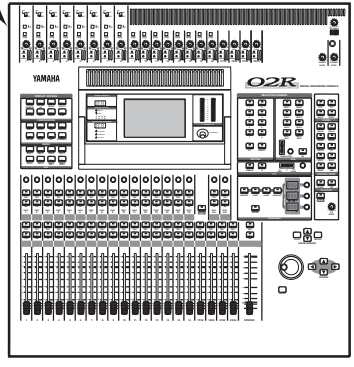

Connect “THRU” to Instrument preamp or combo amp

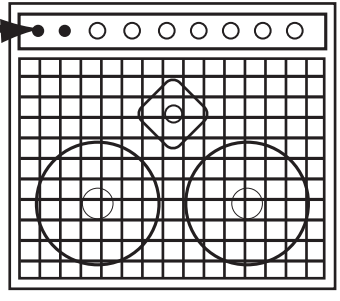

SERVICE

We recommend that if at all possible, a BBE DI-400 which requires service be sent to our facility in Huntington Beach, California. We request that a "RETURN AUTHORIZATION" be issued by the dealer from whom you purchased the unit. If this is not possible, call BBE Sound, Inc. directly at (800) 233-8346, extension 116 to obtain a "RETURN AUTHORIZATION." Include a copy of the bill of sale with the unit when it is shipped to BBE Sound, Inc. so that the service can be expedited.

As the repair turnaround time is minimal, we request that the unit be sent to BBE Sound, Inc. We also need to add reliability data to our files so that future revision may be undertaken, if necessary, to improve the product. **If unit has been purchased outside the US, please contact your national distributor.**

MAINTENANCE

Maintenance of the BBE DI-400 is limited to proper cleaning of the unit with mild household cleaner such as Formula 409™ or Windex™. The chassis is steel , the casing is an aluminum extrusion. Both are finished with a durable polyurethane paint.

There are no user replaceable parts and the unit should not be opened for any reason unless you are a qualified technician. Calibration should be performed if parts are replaced or if a performance check-out indicates a problem with calibration. Long term use has shown that over the life of this unit there is little or no drift of the components in the BBE DI-400 which would cause a change in calibration.

WARRANTY

Warranty registration of the unit to BBE Sound, Inc. is not necessary. It is strongly recommended that you retain a copy of the bill of sale for future reference.

IT IS THE SOLE RESPONSIBILITY OF THE END USER TO PROVIDE THE BILL OF SALE OR OTHER MEANS OF PROOF OF PURCHASE TO VALIDATE THE WARRANTY IF WARRANTY SERVICE IS REQUESTED.

The BBE DI-400 is warranted against defects in material and workmanship for a period of five (5) years from date of purchase from BBE Sound Inc. or from an authorized dealer. During this period, we will repair units free of charge providing that they are shipped prepaid to:

BBE Sound, Inc.,
5381 Production Drive,
Huntington Beach, CA 92649.

We will pay return UPS shipping charges within the USA. All charges related to non-UPS shipping, including customs clearance, will be billed. The warranty will be honored for the longer of either 90 days from the date of any service or the remainder of the original 5 Year factory warranty.

This warranty will be consider null and void by BBE Sound, Inc. if any of the following is found:

1. The equipment has been physically damaged.
2. The equipment shows signs of abuse.
3. The equipment has been electrically damaged by improper connection or attempted repair by the customer or a third party.
4. The equipment has been modified without authorization.
5. The bill of sales indicates that the purchase date of the equipment is not within the warranty period.

All non-warranty repairs are warranted for a period of 90 days from the date of service.

BBE Sound, Inc. is NOT LIABLE FOR CONSEQUENTIAL DAMAGES. Should the unit fail to operate for any reason, our sole obligation is to repair it as described above.

DO NOT RETURN ANY PRODUCT TO THE ABOVE ADDRESS WITHOUT INSTRUCTIONS AND AUTHORIZATION ISSUED BY THE ABOVE LOCATION.

Frequency Response @ Line Out,
process mode:.....Program Controlled
bypass mode: .....10Hz to 50kHz (+/- 1dB)
Signal to Noise Ratio:
BBE OUT 118dB
BBE IN (@ 10).....115dB
THD: BBE OUT .....less than 0.005% at -l0dBu input 20-20kHz
BBE IN 0.05% (20-20kHz)
Noise: BBE OUT .....-105dBu
BBE IN (@ 0) .....-94dBu
BBE IN (@ 10).....-85dBu
Input Impedance:
instrument .....1 MEG Ohms
line.....12k Ohms
Output Impedance:
XLR .....600 Ohms

*** 0dBu = 0.775Vrms**

Power Requirements: .....U.S., Canada & Japan models: 120VAC, 50/60Hz, 8 WATTS
.....Standard model: 220VAC, 50/60Hz, 8 WATTS
Dimensions: ....19"(W) x 5.5"(D) x 1.7"(H)
Shipping Weight: .....7 lbs.

Note: Due to continuing product improvement, specifications and design are subject to change without notice.

BBE® Sound Inc.

5381 Production Drive
Huntington Beach, CA 92649
714-897-6766 • FAX 714-896-0736

www.bbesound.com

covered by U.S. Patent 4,482,866 and other U.S. and foreign patents pending.
BBE is the registered trademark of BBE Sound, Inc.

rev. 1 12/06